Shampoo Bowls

3100 CAMEO BOWL
3800 ALPHA BOWL

PORCELAIN ENAMEL SHAMPOO BOWL WITH VACUUM BREAKER AND MODEL 522 FIXTURE INSTALLATION AND PLUMBING

NOTE: Read the instructions through before starting to familiarize yourself with the components.

Any conformance with LOCAL CODES or INSPECTIONS is the RESPONSIBILITY OF THE PURCHASER.

1. Attach the Fixture to the Bowl according to the instructions packed with the Fixture.

ATTACH HOSE RECEIVER TO BOWL (STEPS 2 thru 6).

2. To make Hose Receiver installation easier, complete these steps to cut screw threads in the mounting holes:
   - Take a Mounting Screw and drive it 2 or 3 turns into one hole. **DO NOT OVERTIGHTEN.**
   - Remove the Screw.
   - Repeat for all four (4) mounting holes.

If the Bowl is not equipped with a Vacuum Breaker, proceed to Step 4.

*NOTE: If you ordered a Vacuum Breaker, your Hose Receiver will have two holes for mounting the Vacuum Breaker.

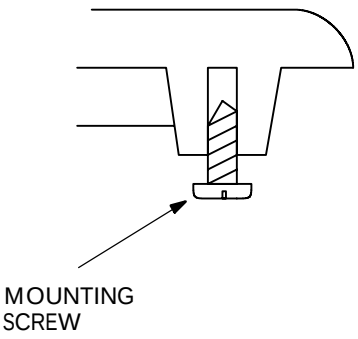

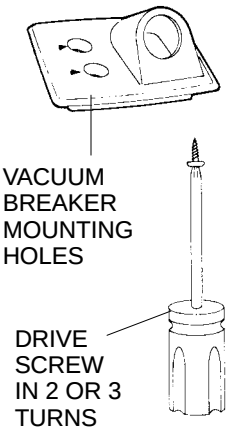

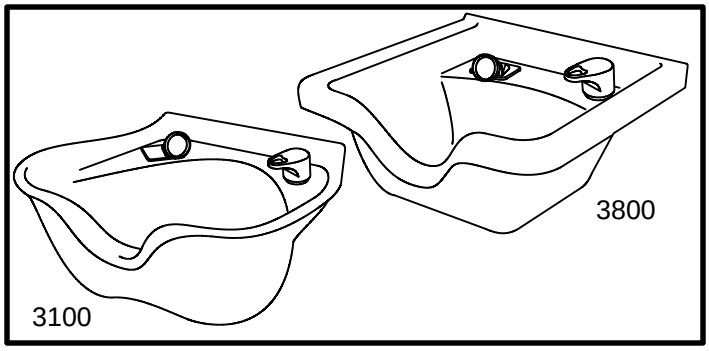

3. Place the Vacuum Breaker pipes through the Gaskets and the holes in the Hose Receiver as shown. Secure the Vacuum Breaker to the Hose Receiver with two Nuts. **DO NOT OVERTIGHTEN.**

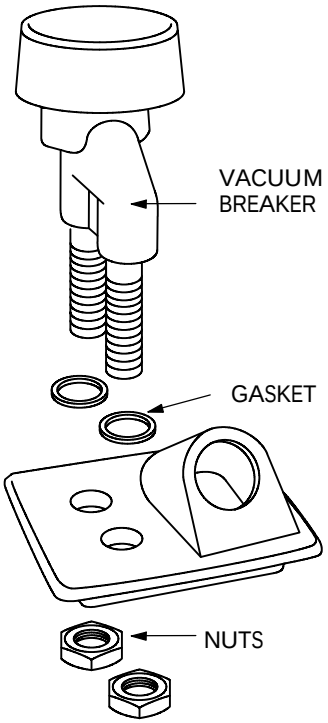

NOTE: Install the Vacuum Breaker as shown. If the Vacuum Breaker is installed backwards, it will interfere with the Spray.

4. Place the Gasket over the flange on the bottom of the Hose Receiver.

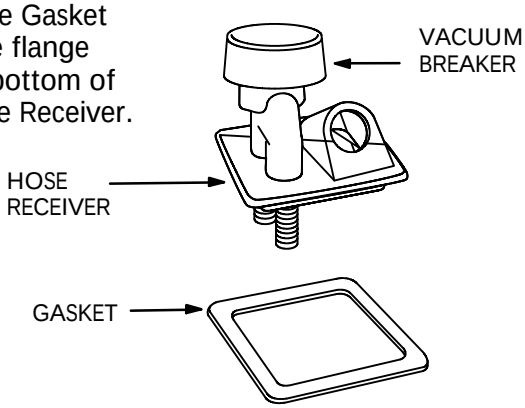

Belvedere USA Corporation
A wholly owned subsidiary of The Wella Corporation
One Belvedere Boulevard, Belvidere, Illinois 61008
Printed in U.S.A. E.C.O. 4164 4001021 Rev. 1-03

5. Place the Hose Receiver in the Bowl with the large hole in the dome facing the front of the Bowl.
Install the Mounting Bracket on the bottom side of the Bowl with four (4) embossed corners facing upward, against the bottom of the Bowl. Secure with four (4) Screws. **DO NOT OVERTIGHTEN.**

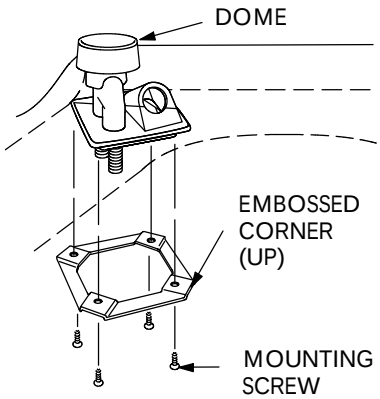

6. If your Bowl *is not* equipped with a Vacuum Breaker attach the Spray Hose connector to the fixture tailpiece.

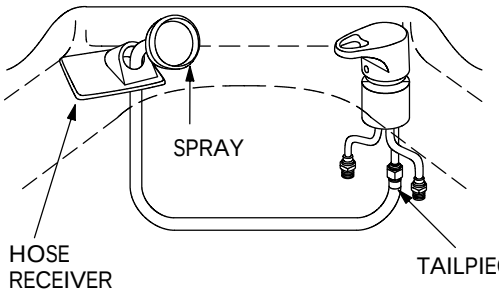

If your Bowl *is* equipped with a Vacuum Beaker, connect one end of the Fixture Hose to the inlet side of the Vacuum Breaker. Connect the other end to the Fixture Tailpiece. Attach the Spray Hose connector to the Vacuum Breaker outlet.

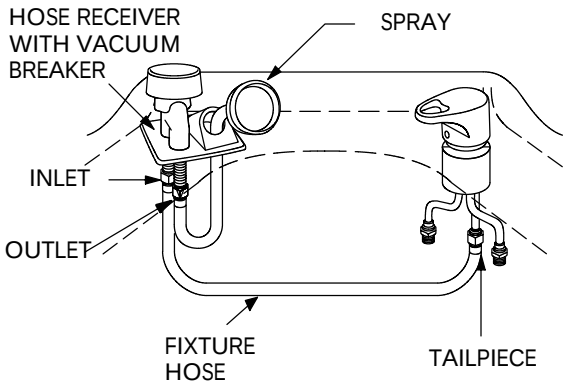

INSTALL THE DRAIN ASSEMBLY (STEPS 7-10)

7. Apply a liberal amount of plumber's putty (available at most hard-ware stores) around the top of the drain opening.

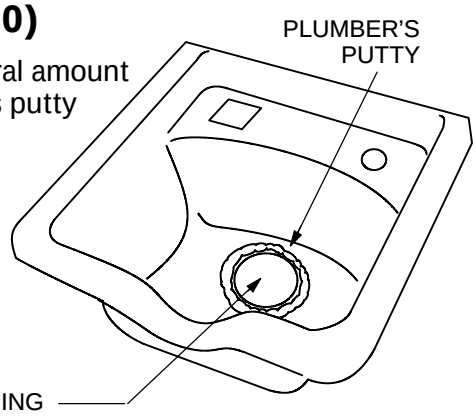

8. Place the Strainer Body in the opening, and press it into the plumber's putty.

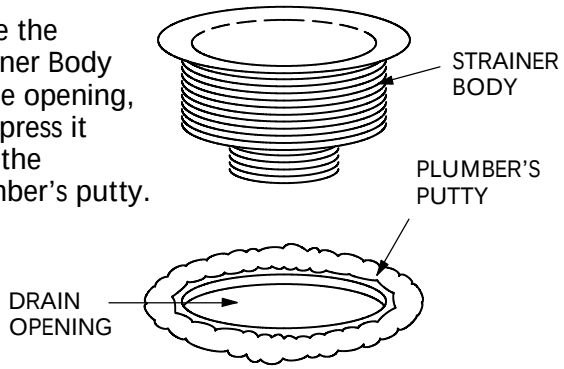

9. From the underside of the Bowl, place the Fiber and Rubber Washers over the Strainer Body. Secure the Strainer Body with the Nut. **DO NOT OVER-TIGHTEN**. When the Strainer Body is tightened securely to the Bowl, clean off any excess plumber's putty.

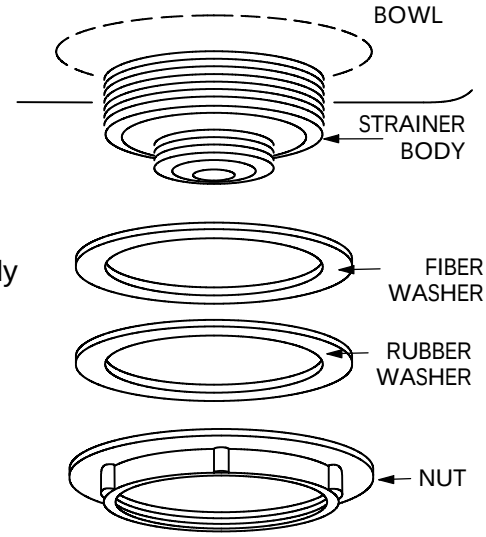

10. Attach the Gasket and Tailpiece to the Strainer Body. **DO NOT OVERTIGHTEN.**

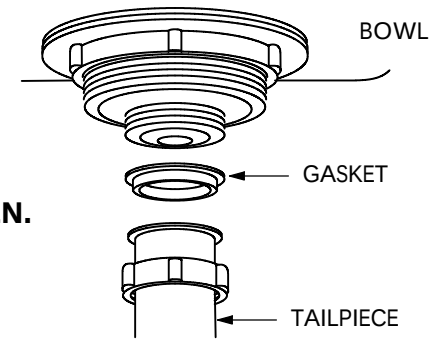

TO MOUNT THE 3100 and 3800 BOWLS TO THE WALL (STEPS 11 THRU 13)

11. Install the Wall Bracket so that the top edge is 31-$^1/_4$" from the finished floor. (This backet height is suggested to obtain the most suitable neckrest height. However, the bracket height may be varied to suit personal preference.) Be sure that the Bracket is securely fastened to a structural member in the wall. Also, be sure the Bracket is level. Install the Leveling Bolt into the Wall Bracket.

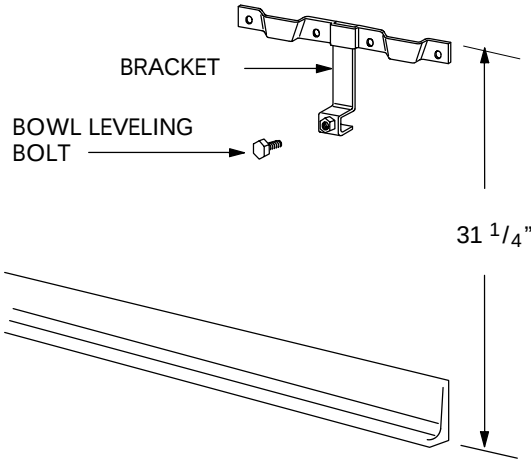

13. Check to be sure the Bowl is level side-to-side and front-to-back. Connect the Fixture to the hot and cold supply lines. Install the trap and connect the drain. Apply a bead of silicone to the back edge of the Bowl to seal it to the wall.

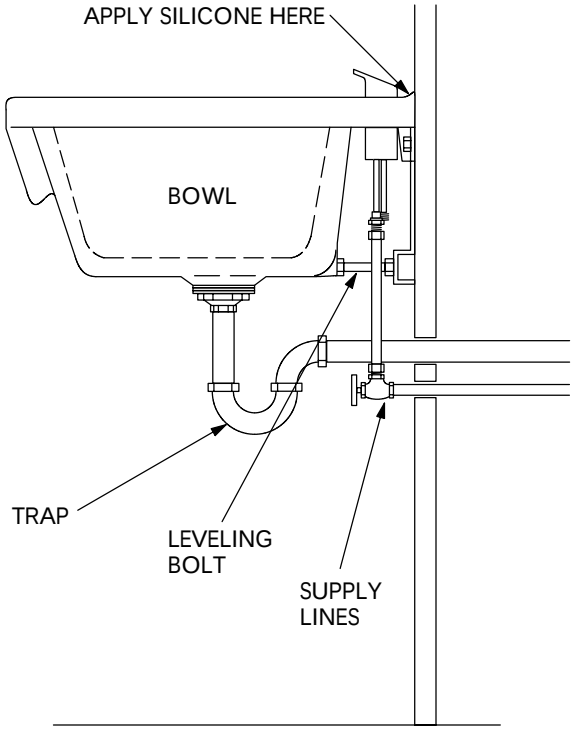

12. Mount the Bowl onto the Wall Bracket by lowering the Lugs on the back of the Bowl into the Wall Bracket.

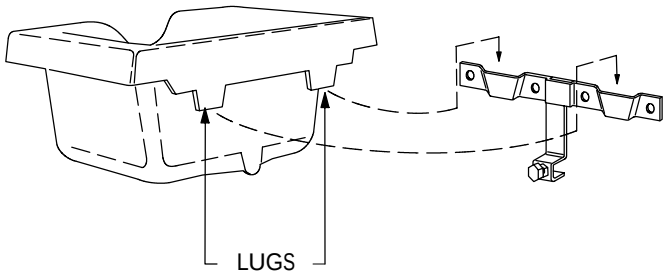

CLEANING INSTRUCTIONS

Paste wax monthly to preserve and protect against common soils.

With normal care your bowl will last many years.

CLEAN ONLY WITH A NON-ABRASIVE LIQUID CLEANER.

Dow Tub & Tile Cleaner®	409®
Mr. Clean®	Fantastic®

DO NOT USE HARSH ABRASIVES
These will dull the sparkling surface.

See back page for rough-in specifications.

ALL PLUMBING TO BE PLANNED AND PERFORMED BY A QUALIFIED PLUMBER

IMPORTANT NOTE:
It is the responsibility of the owner and/or the installer to be sure that the installation conforms to all local plumbing codes and regulations.

ROUGH-IN PLUMBING SPECIFICATIONS.

This Shampoo Bowl is designed for optimum comfort when the Bowl Neckrest is at 31".
However, this may vary to suit individual salon owners.
SEE NOTE BELOW.

Belvedere Recommends a Bowl Neckrest height of 31".

To mount the Bowl at this height, locate the bracket height as shown in these specifications.

TOP
VIEW

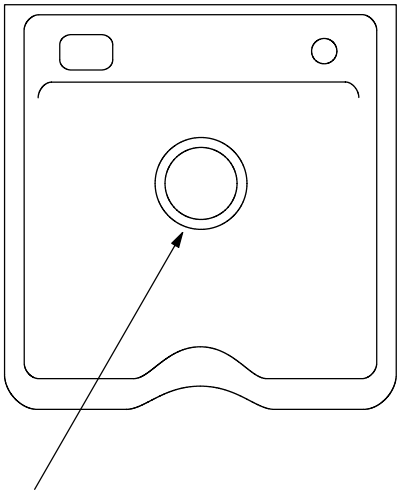

3 1/2" BASKET STRAINER

IMPORTANT!
DO NOT OVERTIGHTEN
DRAIN ASSEMBLY!